

SOLAR GENERATOR

ESS-Li Series



User Manual

Content

1. Installation Instructions -----	1
2. Outlook of Inverter -----	5
3. Wiring instructions-----	9
4. LCD display -----	17
5. Operation-----	20
6. Maintenance -----	26
7. Error and Solution -----	27
8. Technical specification -----	28
9. Appendix--485 Communication Port-----	32
10. Appendix(Maintenance Record&Certificate)-----	33



Warning

This is A class inverter. It might cause slightly radio interference in daily life. And practical measure is required to take under this condition.

Preface

Thank you for the purchase of solar generator(Hereinafter referred to as inverter). Please read this manual carefully before installing and using the inverter!

Copyright

We have been devoted to technological innovation and aims to meet the demands of its customers with better product and services. And product design and specification would be updated without prior notice. Please in kind prevail!

1.Installation Instructions

1-1: Open-package inspection

1. After opening the package, please check random accessories, including user manual (contains conformity certificate and warranty card), 2pcs battery cables and accessories for optional functions. And check whether the inverter is still kept well after transportation, if find any broken or component missing, do not turn on the machine, feedback to the carrier and distributor.

Note:

- Please keep the packing box and packing material, can be used for next delivery if needed.
- This series of product is very heavy (check appendix as reference), please handle with care when carrying.

1-2: Installation notice

- 1) Install in an area of well ventilated, free of water, burning gas and corrodent.
- 2) Not good to put on the side, better keep good air ventilation from front panel's bottom air intake, or air outlet from back panel's fan, and side face of machine.
- 3) Around environment temperature should remain 0 to 40 centigrade.
- 4) If disassembling and operate under low temperature environment, may happen water condense, only can work till thorough dry of machine inside and outside, otherwise will be shock risk.
- 5) If the machine is placed for a long time, it should be confirmed that the machine is completely dry and no corrosion can be installed and used.

1-3:Installation steps

1) Environmental requirements

Open the package and place the inverter in a reasonable working environment. Refer to the "Installation Precautions" for specific requirements.

2) Wire diameter selection

Use a cable with a suitable wire diameter, which can not be lower than the national safety standard. The general wire diameter is selected according to the current density of not more than 5A/mm², and the length of the connecting wire is minimized to reduce the loss.

3)Connect the battery

Please select the appropriate lithium battery module voltage according to the rated battery voltage of the Energy Storage System (this series of models has a built-in lithium battery module). If the lithium battery module needs to be expanded, an external lithium battery module can be connected (NOTE: Suitable for some models, External lithium battery module must have the same specifications as the built-in lithium battery module, including communication protocol). Connect the positive and negative terminals of the external lithium battery module to the SPARE BATTERY terminal of the Energy Storage System. Be careful not to reverse the positive and negative terminals, otherwise the product and the lithium battery module may be damaged.

4) Connect the load

Turn off all loads firstly, then connect the AC load to the AC output of the inverter (AC OUTPUT), confirming that the load polarity is not reversed, and ensure the load is lower than the standard power of the inverter.

5) Connecting PV(Ignore this step if there is no built-in controller)

Connect the PV cable to the circuit breaker that meets the breaking capacity, and then connect it to the PV input terminal of the inverter. the PV array open circuit voltage and short circuit current should be lower than the maximum PV input voltage and current of the rated charge controller. Note:Be careful not to reverse the polarity.

6) Connect mains power

Connect the utility grid input cable to the AC input end of the Energy Storage System. Note that its phase cannot be reversed with the main board.

7) Selection of circuit breaker

a. The circuit breaker on the battery side should be a DC circuit breaker whose working voltage should be greater than the rated voltage of the battery; the circuit breaker on the PV input side should be a DC circuit breaker whose working voltage should be greater than the rated voltage of the PV array; the circuit breaker on the AC input side should be an AC circuit breaker whose working voltage should be greater than the rated voltage of the mains.

b. The rated current of the circuit breaker should be about 1.5 times of the maximum current inverter during operation .


Note:

- Before connecting the load to the machine, please turn off the loads firstly.
- This product can only protect high-voltage surges with low energy. In areas with high lightning output, it is recommended to install lightning protection devices outside the PV input terminals(Ignore this content if there is no built-in controller).
- To ensure the personal safety of the user and ensure the correct use of the product, please confirm that it is properly grounded before starting the machine.
- If user want to load an inductive load such as a motor or a laser printer which operating power is too large, the inverter rated capacity should be selected according to its peak power .The load starting power is generally 2 to 3 times of its rated power.

1-4: Placement

Please leave 10cm of space for each side of inverter to keep good air circulation.

(Only suitable for installation on concrete or other non-combustible surfaces)

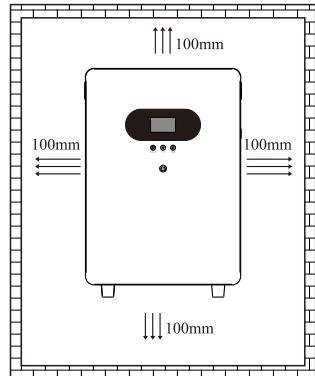


- ★ Avoid direct sunlight
- ★ Avoid dust
- ★ Avoid moisture and liquids
- ★ Avoid over heating


1-5: Installation size & Wall mounted installation

1) Installation size


a. 301H/A、601H/A、122H Series

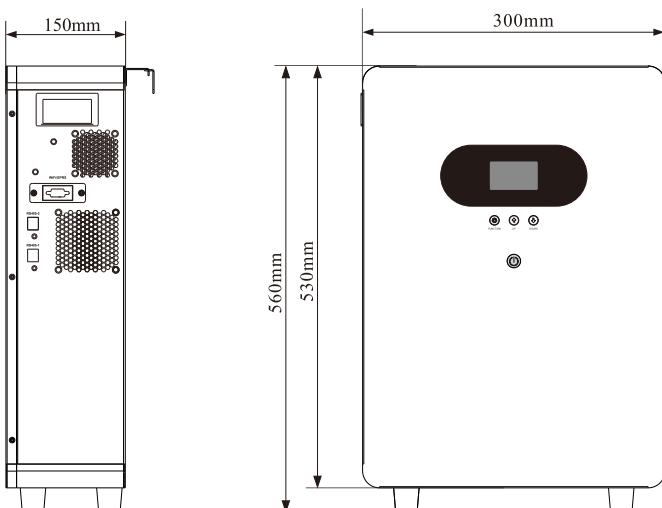


b. 222H Series

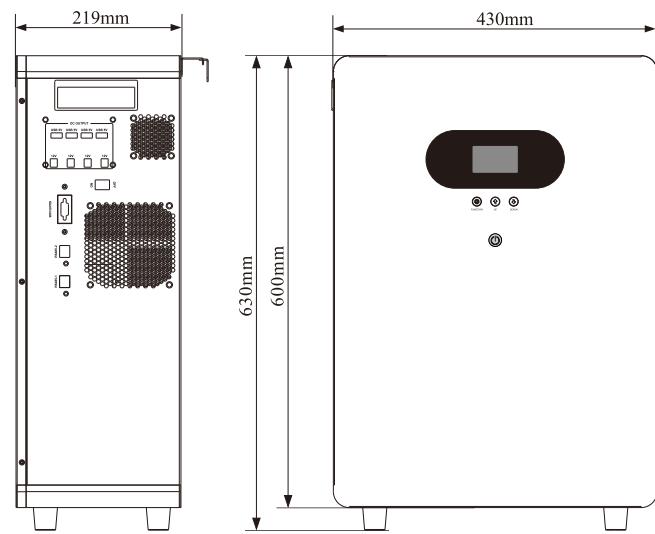

c. 302H、502H Series

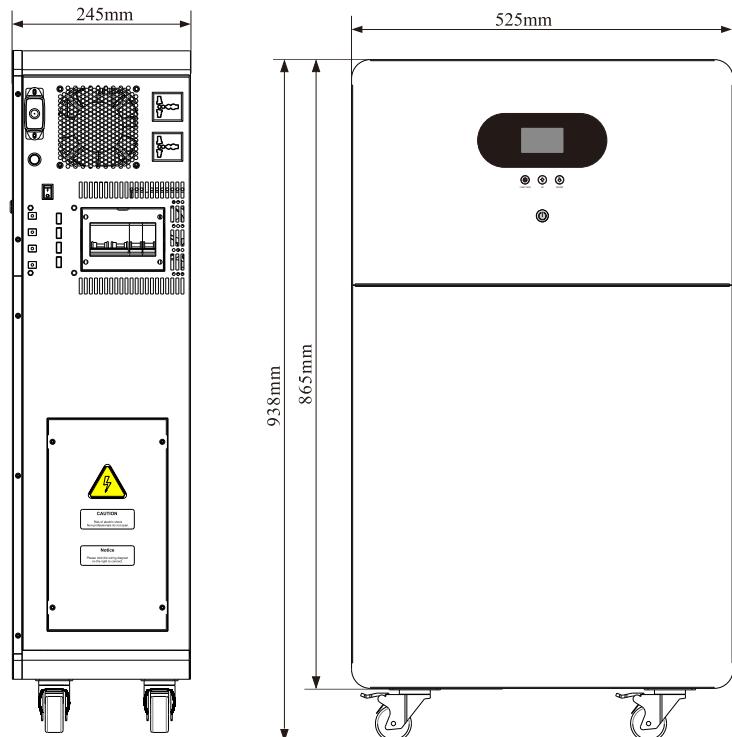

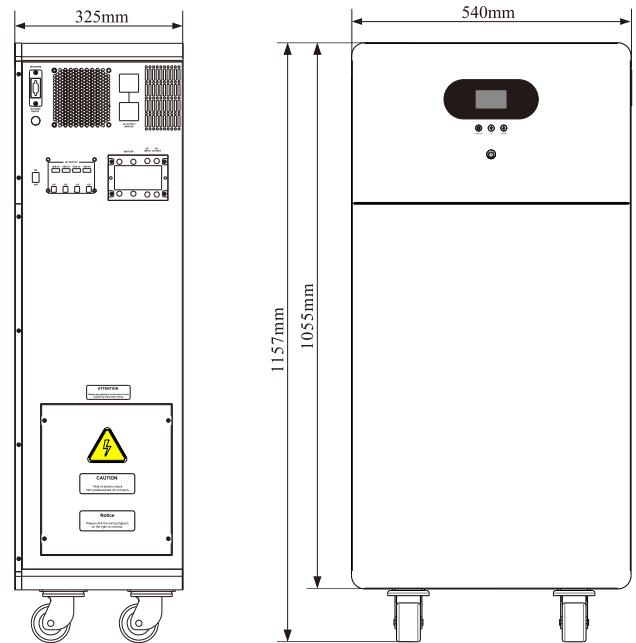

2) 安装


Applicable to 301H/A, 601H/A, 122H, 222H series models

To prevent the machine from tipping over, it is recommended to fix the machine to the wall:

a. First fix the fixing bracket on the machine with 2Pcs M4x6 screws (Fixed bracket and screws are delivered randomly);


b. Install the wall fasteners on the wall, it is recommended to use M6 expansion screws (wall fasteners are delivered randomly, and the expansion screws need to be purchased by the user);

c. Hook the machine on the wall fastener and install it successfully.

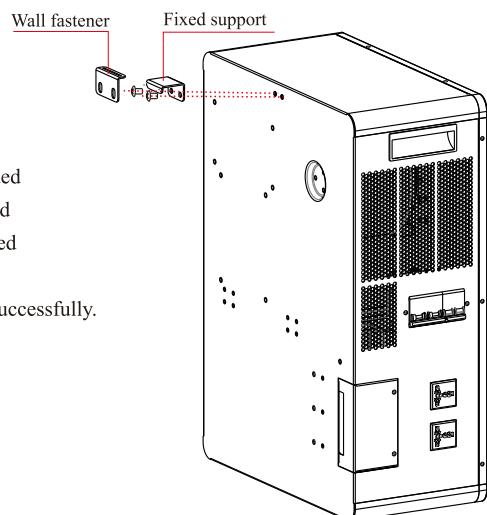


2. Outlook of Inverter

2-1. 301H/A, 601H/A, 122H Series

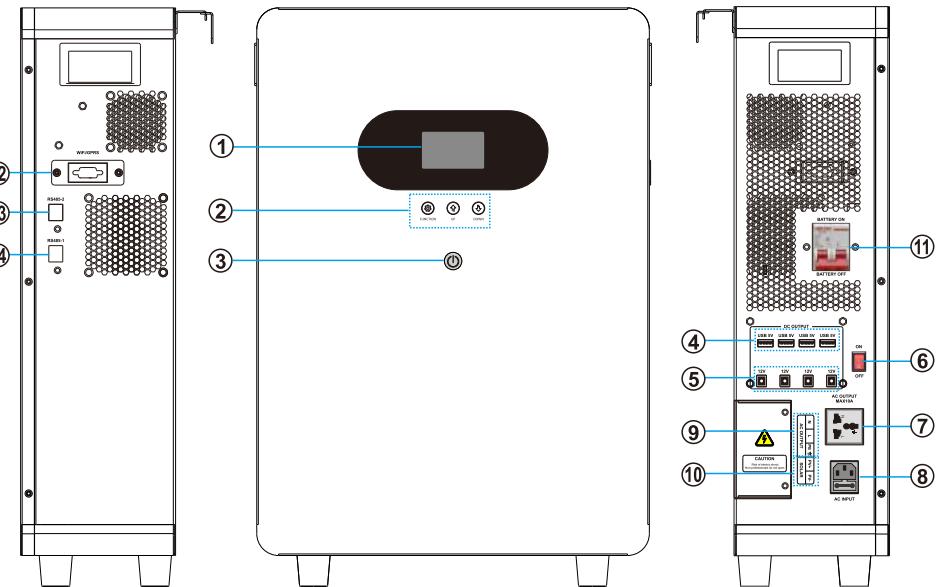


1. LCD display	2. Function button
3. Power on/off button	4. DC 5V(USB) output port
5. DC 12V output port	6. DC output switch: Control the DC output of 5V/12V port
7. AC output socket	8. AC input socket
9. AC output terminal(N/L/PE)	10. PV input terminal
11:Battery breaker	
12. APP data collector interface(WIFI/GPRS data collector(optional))	
13. RS485-2 communication interface(Optional. If this interface is configured, the APP data collector interface is cancelled)	
14. RS485-1 communication interface	

Note : The image shown here is indicative only. The actual product may differ.

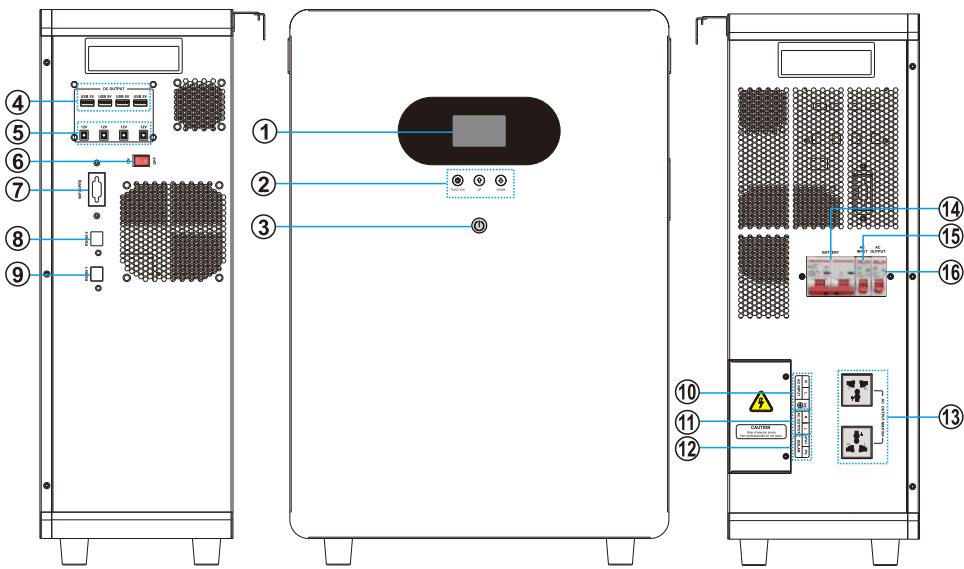


1. LCD display	2. Function button
3. Power on/off button	4. DC 5V(USB) output port
5. DC 12V output port	6. DC output switch: Control the DC output of 5V/12V port
7. APP data collector interface(WIFI/GPRS data collector (optional))	
8. RS485-2 communication interface(Optional. If this interface is configured, the APP data collector interface is cancelled)	
9. RS485-1 communication interface	10. AC input terminal(N/L/PE)
11. AC output terminal(N/L)	12. PV input terminal
13. AC output socket	14:Battery breaker
15:AC input breaker	16:AC output breaker

Note : The image shown here is indicative only. The actual product may differ.

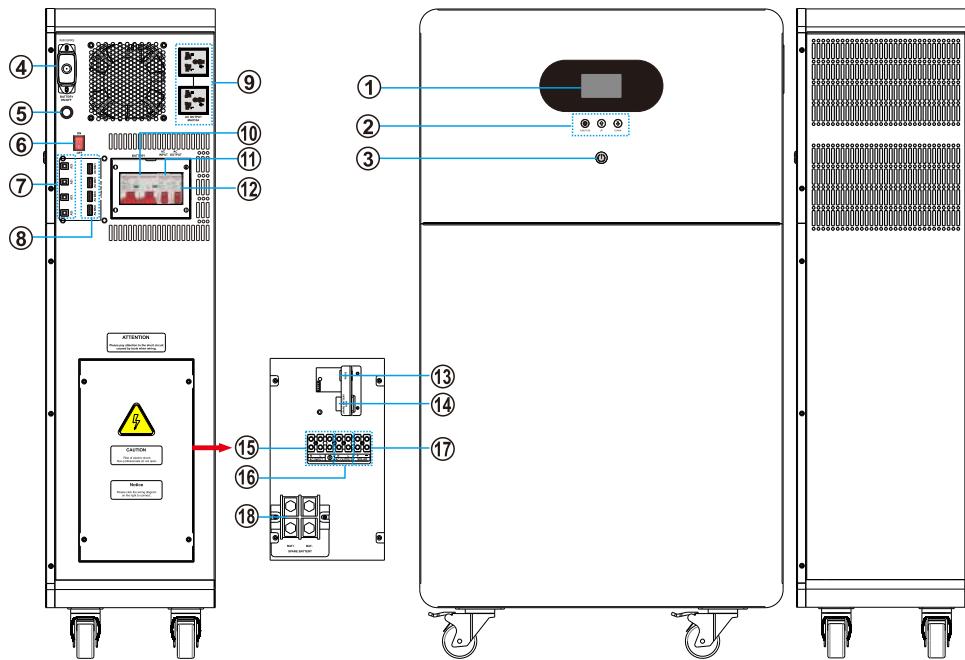

1. LCD display	2. Function button	3. Power on/off button
4. APP data collector interface(WIFI/GPRS data collector (optional))		
5. Lithium battery module switch button	6. DC output switch: Control the DC output of 5V/12V port	
7. DC 12V output port	8. DC 5V(USB) output port	
9. AC output socket	10:Battery breaker	
11:AC input breaker	12:AC output breaker	
13. RS485 communication port(optional)	14. RS485 port(Spare Battery)	
15. AC input terminal(N/L/PE)	16. AC output terminal(N/L)	
17. PV input terminal	18. Spare Battery terminal	

Note : The image shown here is indicative only. The actual product may differ.

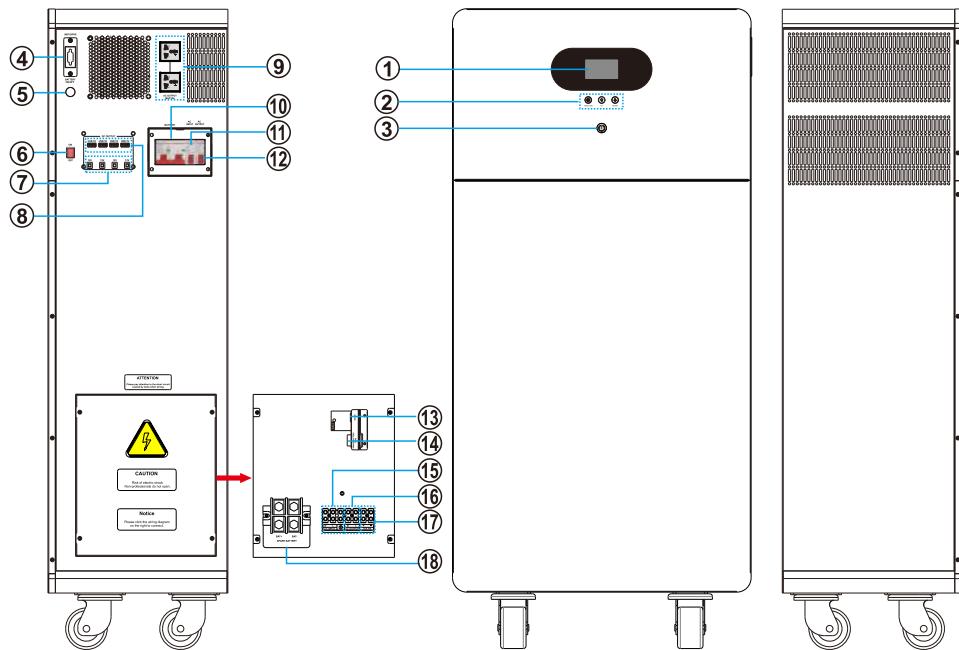


1. LCD display	2. Function button	3. Power on/off button
4. APP data collector interface(WIFI/GPRS data collector (optional))		
5. Lithium battery module switch button	6. DC output switch: Control the DC output of 5V/12V port	
7. DC 12V output port	8. DC 5V(USB) output port	
9. AC output socket	10:Battery breaker	
11:AC input breaker	12:AC output breaker	
13. RS485 communication port(optional)	14. RS485 port(Spare Battery)	
15. AC input terminal(N/L/PE)	16. AC output terminal(N/L)	
17. PV input terminal	18. Spare Battery terminal	

Note : The image shown here is indicative only. The actual product may differ.


3. Wiring instruction

(Note: For specific battery voltage and solar panel input parameters, please refer the technical specifications table. This figure is a wiring diagram.)


3-1. 301H/A、601H/A、122H Series(The battery of this series of standard batteries is LiFePO4 lithium iron phosphate 12.8V/50AH or 25.6V/50AH)

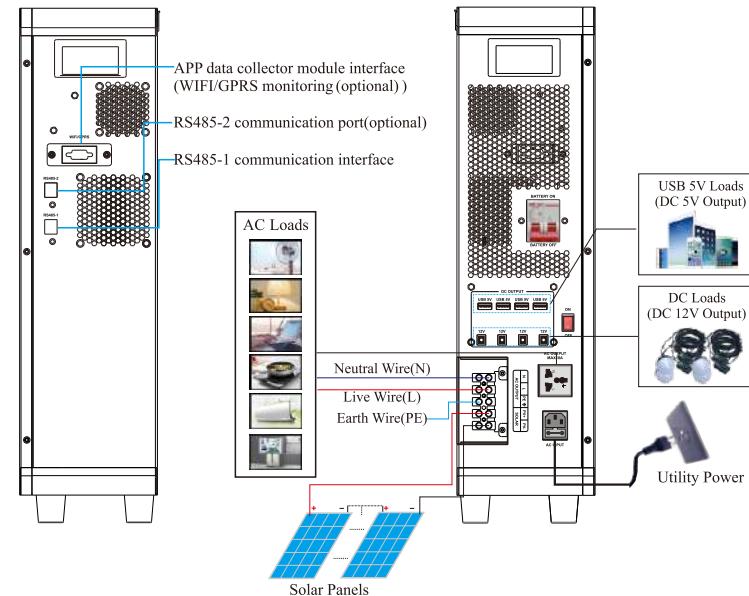


3-2. 222H Series(The battery of this series of standard batteries is LiFePO4 lithium iron phosphate 25.6V/100AH)

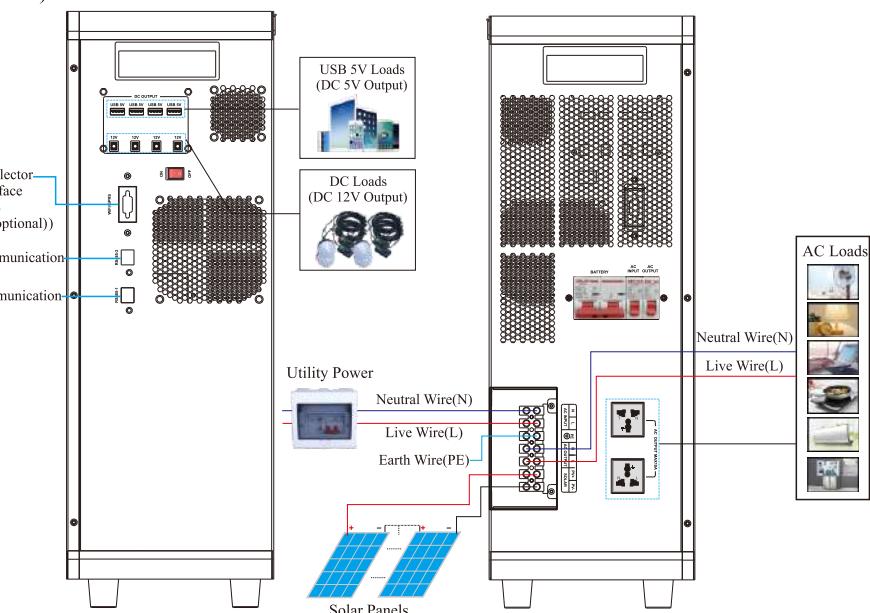

3-3. 302H/502H Series(The battery of this series of standard batteries is LiFePO4 lithium iron phosphate 51.2V/100AH)

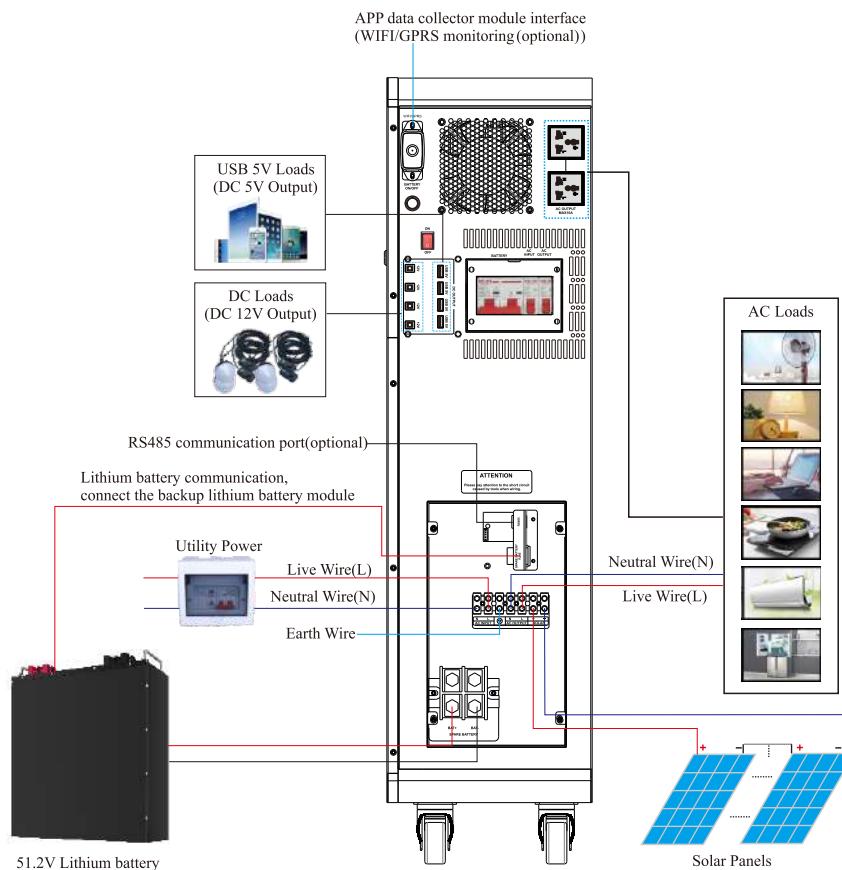

3-4. 502H/150、502H/200、602H、702H Series(The battery of this series of standard batteries is LiFePO4 lithium iron phosphate 51.2V/150AH or 51.2V/200AH)

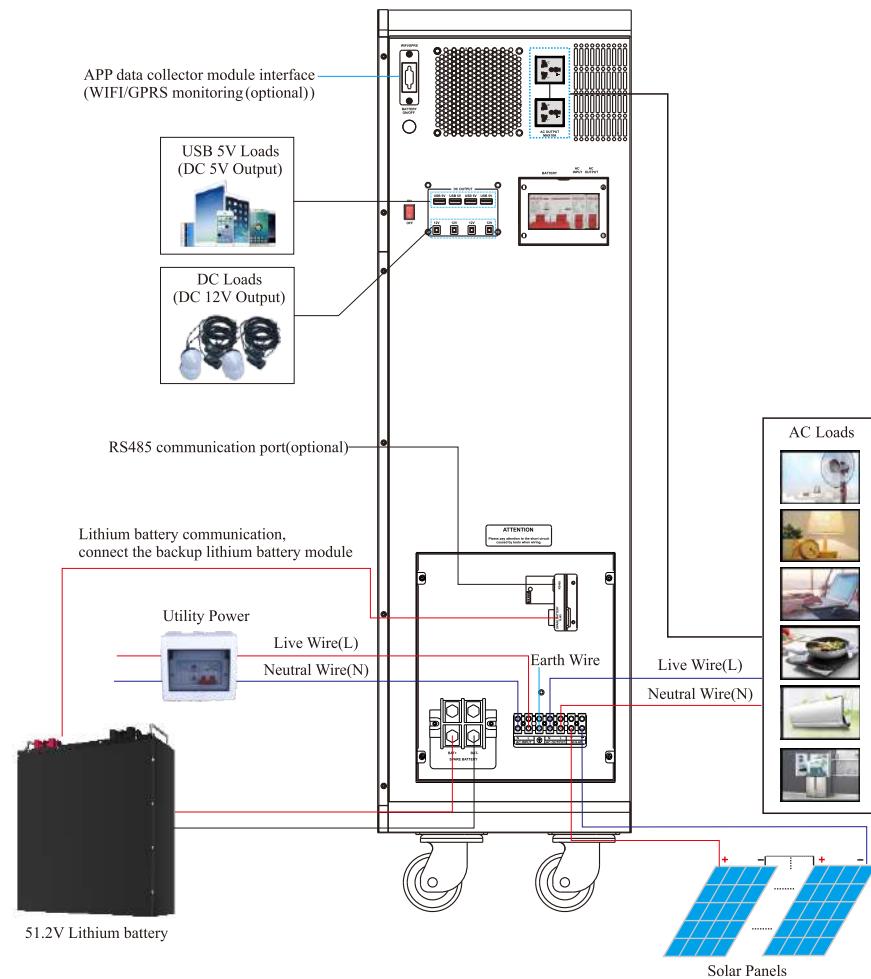


Note:

- Please avoid reverse connection while connecting batteries and PV to the inverter.
- Loads for each universal AC outlet should not exceed 1kW.
- If a generator is used as input power, the operation is as follow: start up the generator, after it runs steadily, connect and turn on inverter. When the inverter starts to work, connect user's equipment to the AC output.
- Capacity of generator ≥ 3 times of the rated capacity of inverter.

Preparation

a. 301H/A, 601H/A, 122H Series

Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

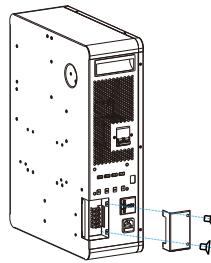


1) AC Output Connection

CAUTION!! There are two terminal blocks with "OUTPUT" markings. Please do NOT mis-connect output connectors.

Please follow the following steps to connect the AC input / AC output cable:

- Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected .
- Remove insulation sleeve 10mm for three conductors.
- Insert AC output wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor first.

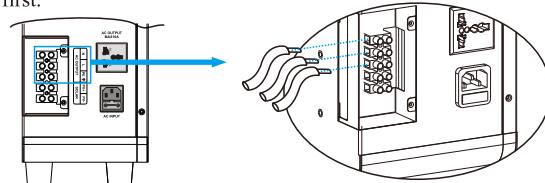


CAUTION: Important!

Be sure to connect AC wires with correct polarity.

2) PV Connection


Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of SOLAR input connector. Connect negative pole (-) of connection cable to negative pole (-) of SOLAR input connector.
- Make sure the polarity of the wiring is correct and the connection is firm.

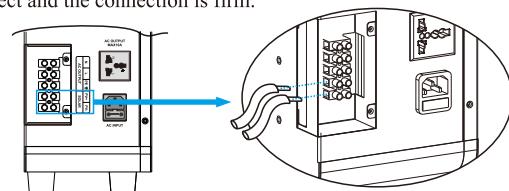

Final Assembly


After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

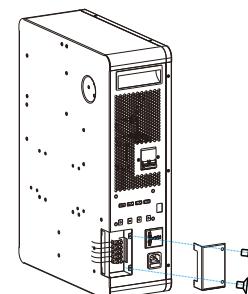

Note : The image shown here is indicative only. The actual product may differ.

b. 222H Series

Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

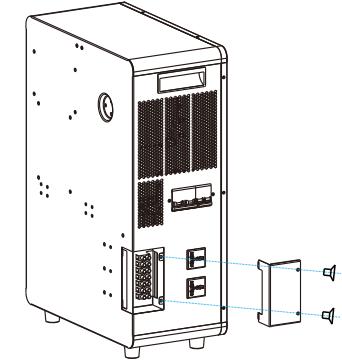


1) AC Input/Output Connection

CAUTION!! There are two terminal blocks with "INPUT" and "OUTPUT" markings. Please do NOT mis-connect input and output connectors.

Please follow the following steps to connect the AC input / AC output cable:


- Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected .
- Remove insulation sleeve 10mm for five conductors.
- Insert AC Input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor first.

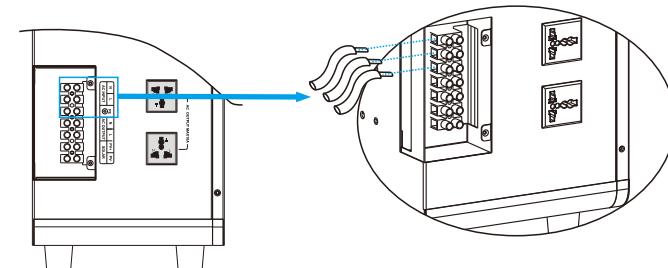

WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

- Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

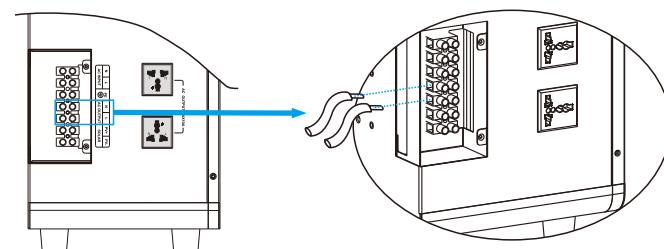


CAUTION: Important!

Be sure to connect AC wires with correct polarity.

2) PV Connection


Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of SOLAR input connector. Connect negative pole (-) of connection cable to negative pole (-) of SOLAR input connector.
- Make sure the polarity of the wiring is correct and the connection is firm.

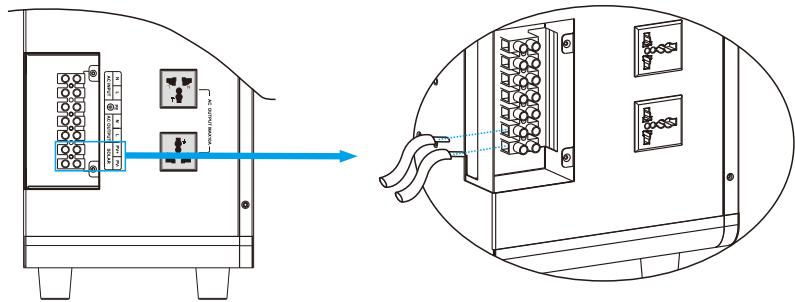

Final Assembly

After connecting all wirings, please put bottom cover back by screwing four screws as shown below.

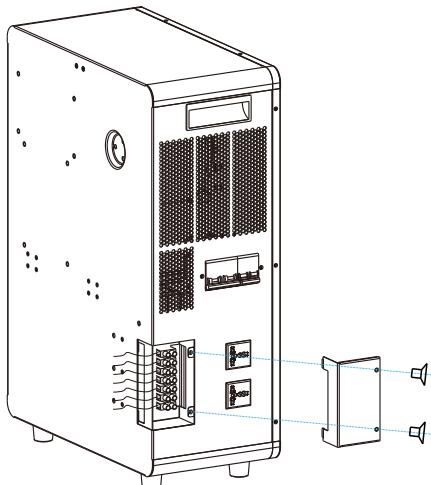


Note : The image shown here is indicative only. The actual product may differ.

Preparation

c. 302H、502H、502H/150、502H/200、602H、702H Series


Before connecting all wirings, please take off bottom cover by removing four screws as shown below.

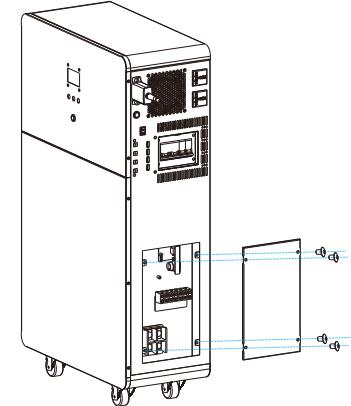

1) Spare Battery Connection

Please follow below steps to implement battery connection:

- Assemble battery ring terminal based on recommended battery cable and terminal size.
- Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure polarity at both the battery and the inverter/charge is correctly (The positive pole is connected to the positive pole and the negative pole is connected to the negative pole) connected and ring terminals are tightly screwed to the battery terminals.

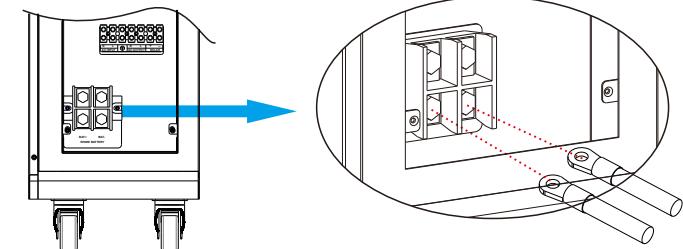


2) AC Input/Output Connection

CAUTION!! There are two terminal blocks with “INPUT” and “OUTPUT” markings. Please do NOT mis-connect input and output connectors.

Please follow the following steps to connect the AC input / AC output cable:


- Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected .
- Remove insulation sleeve 10mm for five conductors.
- Insert AC Input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor first.

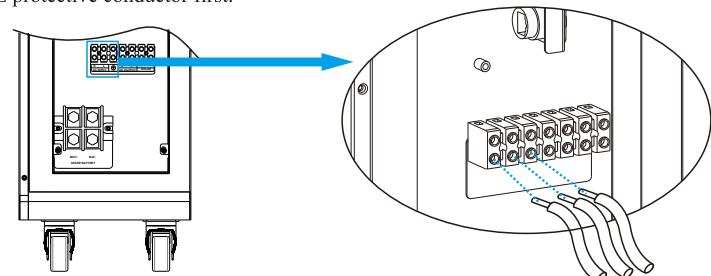

WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

- Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor first.

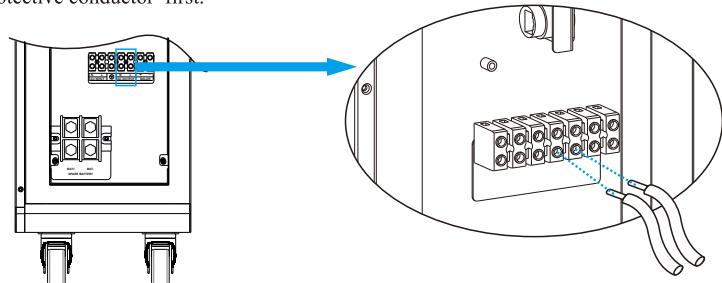


CAUTION: Important!

Be sure to connect AC wires with correct polarity.

3) PV Connection


Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.
- Make sure the wires are securely connected.

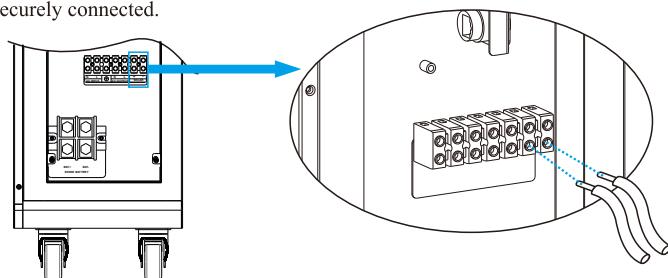


Final Assembly

After connecting all wirings, please put bottom cover back by screwing four screws as shown below.

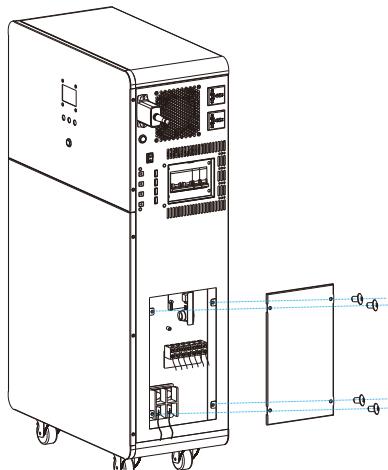

Note : The image shown here is indicative only. The actual product may differ.

4. LCD display

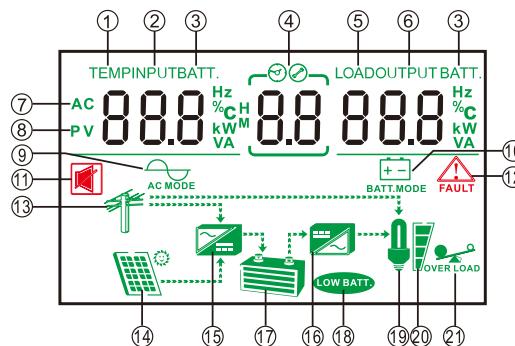

Parameter display area


1 TEMP: Temperature displayed
2 INPUT: Mains input data displayed
3 BATT: Battery data displayed
4 When emergency come, shows alarm code here
5 LOAD: Load data displayed
6 OUTPUT: AC output data displayed
7 AC: AC data displayed
8 PV: PV input data displayed

Icon display area


9 AC MODE: AC mode(means the inverter is already on d1 or d2 (Based on the real setting value))		
10 BATT.MODE: BATT.MODE means the inverter is already on d3:battery mode		
11: Turn mute on/off	12: FAULT: fault alarm	
13: Utility	14: Solar panel(Display when there is a built-in PV controller)	
15: AC charging and PV charging icons	16: Battery powered icons	17: Battery
18: Low battery alarm	19: Load	
20: Load capacity(The load is divided into 4 grids, and the single-grid load is 25% of the full load)		
21: Overload alarm		

4-1. Work flow chart icon introduction(Built-in solar controller)

1) Mains working mode (No PV input, Only the mains charge the battery)

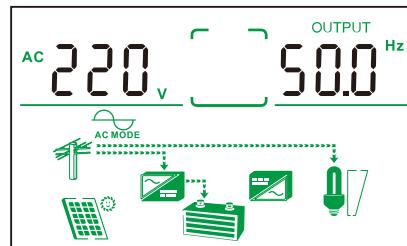

2) Mains working mode (Has PV input, the mains and the PV simultaneously charge the battery)

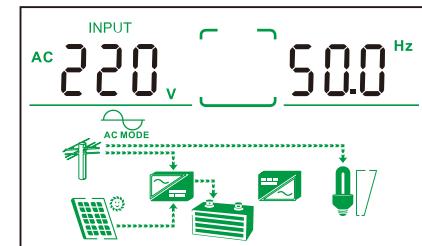

3) Battery working mode (No mains and PV input)




4) Battery working mode (Has PV input but no mains input, only the PV charge the battery)




4-2. Introduction to the work interface(Built-in solar controller)(Mains and PV input are normal)


1) Output interface(Display output voltage and frequency)

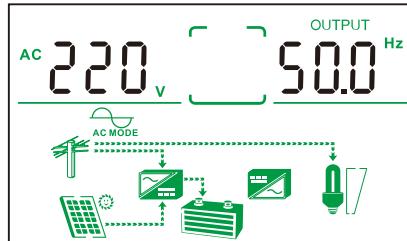

3) Battery interface(Display battery voltage and percentage)

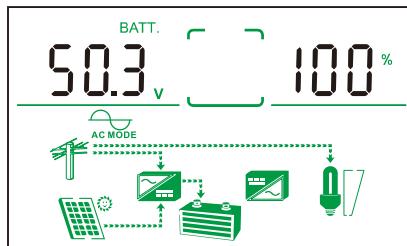


5) Loads interface(Display load power and load percentage)

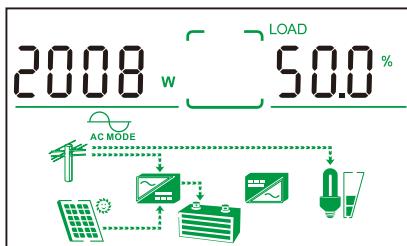


7) Parameter on the left is the RS485-1 communication address of the inverter/On the right is the software version number of the inverter (communicating with the BMS)




2) AC input interface(Display AC input voltage and frequency)

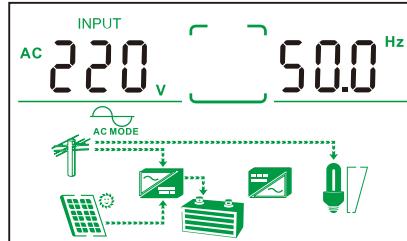

4) Battery interface (displaying the capacity and current of the battery (displayed only on the inverter that reached a communication protocol with the lithium battery, the actual display content depends on the corresponding BMS data))

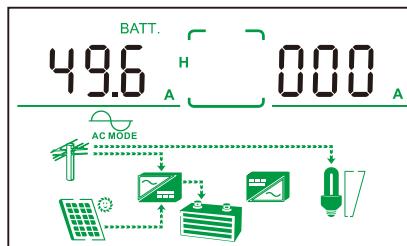


6) Internal temperature interface

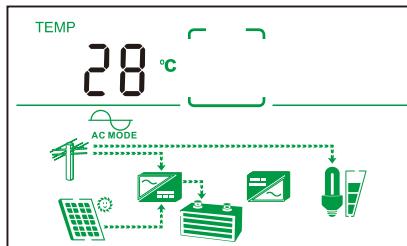


8) PV interface(Display PV voltage and PV current)



9) PV generation capacity / Actual power generation interface

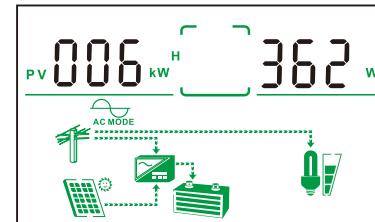


10) Controller Max charging current interface

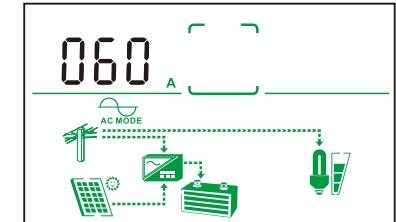


4-3. Three working modes(Built-in solar controller)


1) d1:Mains priority mode (Display AC MODE icon, the working mode depends on the setting value)

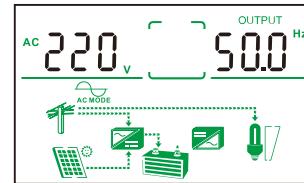

2) d2: Energy saving mode (Display AC MODE , the working mode depends on the setting value)

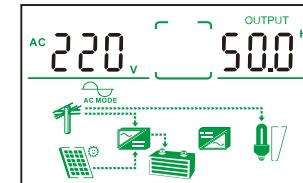

3) d3: Battery priority mode (Display BATT.MODE icon)

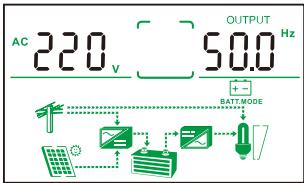

Note:

- If the inverter has no built-in solar controller, the LCD screen does not display the solar panel icon and the PV parameter interface, and the other displays are consistent.
- The actual display parameters are subject to the specific model, and the picture display contents are only used as examples.

Remarks:Introduction to three working modes

1) Mains priority mode(d1)

- When the mains is normal (in line with the mains input voltage range of the inverter), the mains charge battery (if with built-in solar controller, the mains and PV charge the battery simultaneously);on the other hand, the mains supplies stable power to the loads after stabilization. (the loads do not consume PV and battery energy);
- When the mains is abnormal(the mains exceeds the working range of the inverter or the mains supply is interrupted), the loads will be powered by the battery(if with built-in controller, when PV power rate is larger than the loads, PV will power the loads and the surplus energy will charge the battery; when PV power rate is less than the loads, the deficiency will be made up by battery, so both PV and battery will power the loads).

2) Battery(Solar) priority mode(d3)

- When the battery is fully charged (regular parameters Pb:13.2VDC/single battery voltage; Li*: the battery capacity is 85%),even the mains is normal, the loads will be powered by the battery(if with built in controller, when PV power rate is larger than that of the loads, PV will fully powers the loads and the surplus energy will charge the battery; when PV power rate is less than the loads, the deficiency will be made up by battery, so both PV and battery will power the loads);
- When the battery is in low voltage (regular parameters Pb: 11VDC/single battery voltage; Li*: the battery capacity is 15%) and the mains is normal, the inverter will switch to mains priority mode. The mains supplies power to the load after stabilization, and the mains charges battery simultaneously(if with built-in controller, PV and the mains charge the battery simultaneously. The loads do not consume the energy of PV and battery).

Remarks: Under Mains Priority Mode/ Battery Priority Mode, when the mains charging current is not set as 0A, the mains charge battery; when the mains charging current is set to 0A, the mains does not charge battery, but the solar controller charges the battery.

3) Energy saving mode(d2)

- Inverter works under the battery mode, once the load capacity is less than 5% of the inverter rated power, the inverter will start and stop regularly to achieve energy saving effect (ie: the machine will intermittently interrupt the inverter output); When the load is greater than 5% of the inverter rated power, the inverter will out of this energy saving mode.

5. Operation

5-1: Function and setting of button on board

1) ⚡ button

◆ Battery supply state: Power on, press ⚡ button for 1 second, the equipment start output; Power off, press ⚡ button for 1 second, the equipment shutdown.

◆ AC supply state: Power on, the equipment will auto start when AC supply input; Power off, press ⚡ button for 1 second, the equipment turn off output, the equipment shutdown after cut off AC supply.

2) UP/DOWN button

◆ Page scroll: in the main interface, short press the UP or DOWN button for 1 second to view various parameter interfaces, such as output interface, input interface, battery interface, and etc.;

◆ Parameters setting: in the parameters setting interface, short press the UP or DOWN button for 1 second to adjust the parameter value.

3: FUNCTION button

◆ Mute function: In the main interface, press the FUNCTION button for 1 second to turn on/off alarm.

◆ In the main interface, long press the FUNCTION button for 3 seconds to enter the parameters setting interface.

5-2: Function setting description

5-2-1 Introduction to function setting interface


Interface	Descriptions	Remarks
A0 Working Mode	Set working mode: d1 AC input priority, d2 ECO mode, d3 solar(battery) priority	
A1 AC charging current	Set charging current:C0~C6 (C0=0A, C6 is max charging)	
A2 Constant charge voltage	Set constant charge voltage: 13V-15V/single battery voltage	Constant charge voltage
A3 Floating charge voltage	Set floating charge voltage: 13V-15V/single battery voltage	Floating charge voltage
A4 Low voltage protection point	Set low voltage protection point : 8V-13V/single battery voltage	Only available for Pb lead-acid battery
A5 Auto start output recover voltage	Set auto start output recover voltage: 9V-15V/single battery voltage	Only available for Pb lead-acid battery
A6 Mains supply to inverter supply voltage	Set mains supply to inverter supply voltage: 9V-15V/single battery voltage	Only available for Pb lead-acid battery & d3 working mode
A7 Inverter supply to Mains supply voltage	Set Inverter supply to Mains supply voltage: 8V-14V/single battery voltage	Only available for Pb lead-acid battery & d3 working mode
A8 Frequency	50Hz/60Hz available to set	Set the mains input and inverter output frequencies
A9 AC output voltage	AC 105V~120V model: 105VAC/110VAC/115VAC/120VAC available to set AC 220V~240V model: 220VAC/230VAC/240VAC available to set	
A10 Battery type	Pb Lead acid / LI1(GROWATT)Lithium / LI2(Voltronic)Lithium / LI3(PYLONTECH -1)Lithium / LI4(PACEEX)Lithium / LI5(PYLONTECH-2)Lithium / LI6(PYLONTECH-3)Lithium	When set to Pb lead-acid battery, the RS485 communication port communicates with external devices. When set to LI* lithium battery, RS485-1 communication port communicates with lithium battery BMS

A11 Auto start output recover voltage	Set ON or OFF (default OFF)	If this function is enabled, after the inverter battery turns off the output at low voltage, the machine enters the standby state. When the battery voltage rises to the auto start output recover voltage, the machine automatically starts to restore the output
A12 Low voltage protection battery capacity value	Set Low voltage protection battery capacity value 0%-50% (default 5%)	Available for LI* lithium batteries
A13 Low voltage self-restoring battery capacity value	Set Low voltage self-restoring battery capacity value 1%-80% (default 10%)	Available for LI* lithium batteries
A14 Inverter supply to Mains supply battery capacity value	Set Inverter supply to Mains supply battery capacity value 0%-50%(default 15%)	Available for LI* lithium batteries& d3 working mode
A15 Mains supply to inverter supply voltage	Set mains supply to inverter supply voltage 50%-100%(default 85%)	Available for LI* lithium batteries& d3 working mode
A16 Charge end battery capacity value	Set charging end battery capacity value 80%-100% (default 100%)	Available for LI* lithium batteries
A17 RS485-1 Communication address	Set RS485-1 Communication address 000-247(default 001)	The IP address of the APP/RS485-2 interface is fixed 001
A18 Generator function settings	Set ON or OFF (default OFF)	Note: This function needs to be turned on when the AC input is connected to a generator

Note:

1. When the battery type is set to LI* lithium battery, the machine's equalizing charging voltage and floating charging voltage need to be set according to the lithium battery parameters. The lithium battery BMS must maintain normal communication with the inverter (the inverter only supports communication with the specified BMS protocol), if the communication is abnormal, the inverter will not operate normally.
2. When the lithium battery does not need to communicate with the inverter, the battery type can be set to Pb lead-acid battery; according to the lithium battery parameters, set the corresponding parameter value of the inverter (inverter undervoltage protection value > lithium battery undervoltage value; Inverter equalizing charge/float voltage value < lithium battery overvoltage protection value).
3. The voltage value in this manual is the voltage of a single battery, the 48V system is 4 batteries, the 24V system is 2 batteries, and the 12V system is a single battery. The display value of the machine is the voltage per cell x the number of cells, which is 48V system x4, 24V system x2, and 12V system x1 (For example, if the average charging voltage of the 48V model is 14Vx4, it is 56V; And so on.)
4. Pb lead-acid battery: when setting voltage parameters, the following conditions shall be met, otherwise the inverter will report A19 fault.
 - 1) $(A2 \geq A3 \geq A6 \geq A5 \geq A4)$ Average charge voltage \geq float charge voltage $> d3$ (mains \rightarrow inverter) voltage \geq low voltage recovery and power on $>$ battery low voltage protection;
 - 2) $(A6 > A7 > A4)$ $d3$ (mains \rightarrow inverter) voltage $> d3$ (inverter \rightarrow mains) voltage $>$ battery low voltage protection;
 - 3) Low-voltage alarm voltage value (cannot be set) = low-voltage protection voltage value + 0.5V/single battery; high-voltage alarm voltage value (cannot be set) = equalizing charging voltage value + 1.3V/single battery;
 - 4) Low-voltage alarm recovery voltage value (cannot be set) = low-voltage protection voltage value + 1V/single battery; high-voltage alarm recovery voltage value (cannot be set) = average charging voltage value + 0.8V/single battery
5. LI* lithium battery: when setting voltage parameters, the following conditions shall be met, otherwise the inverter will report A19 fault.
 - 1) $(A16 > A15 \geq A13 > A12)$ charging end battery capacity value $> d3$ (mains \rightarrow inverter) voltage \geq low voltage self-recovery $>$ battery low voltage protection;
 - 2) $(A15 > A14 > A12)$ $d3$ (mains \rightarrow inverter) voltage $> d3$ (inverter \rightarrow mains) voltage $>$ battery low voltage protection;
 - 3) Low voltage alarm battery capacity value = low voltage protection battery capacity value + 5%; low voltage alarm recovery value battery capacity value = low voltage alarm battery capacity value + 1%;
 - 4) High pressure alarm and high pressure alarm recovery press BMS.


5-2-2 Operation guide for main interface to enter parameter setting interface

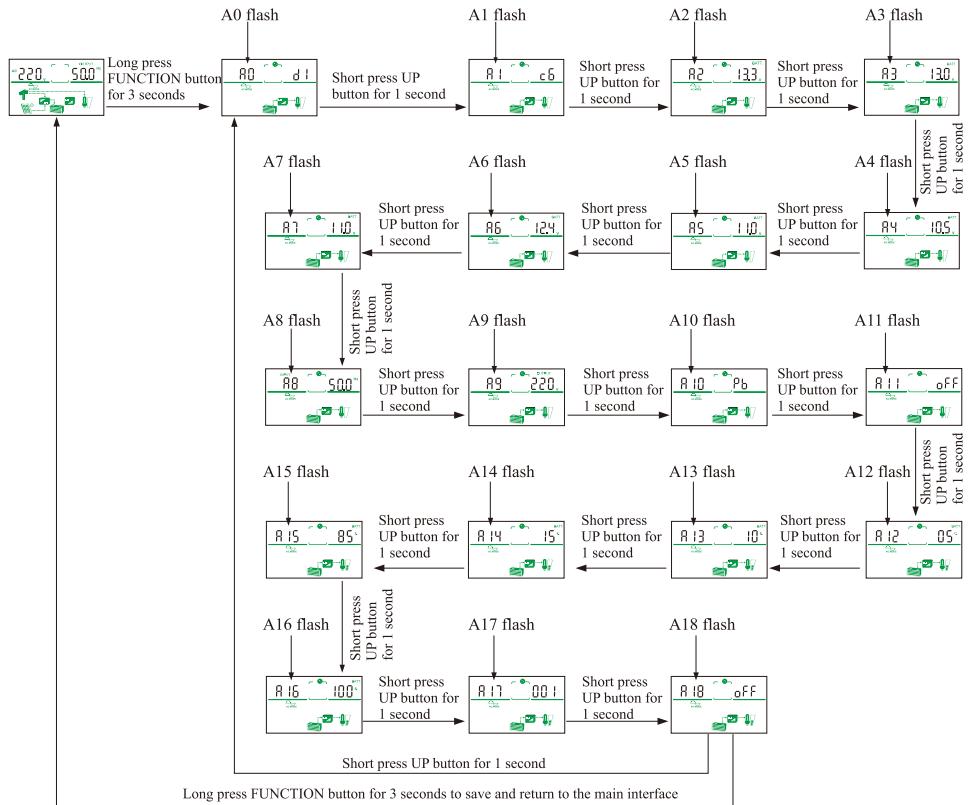


Note: The parameter of each parameter setting interface can be viewed at this time.

5-2-3 Operation guide for parameter setting in setting interface


① A0: Working priority mode setting

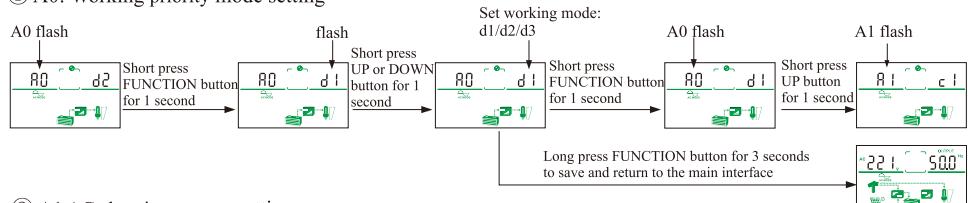


② A1 AC charging current setting

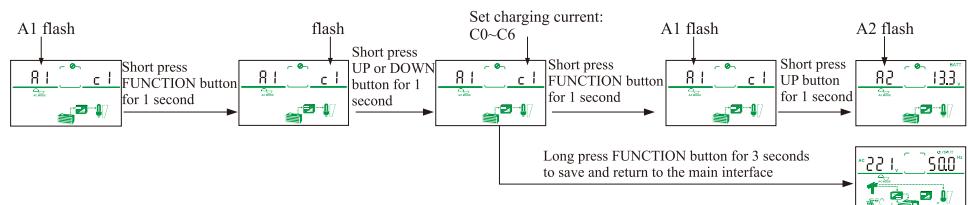


③ A2 Constant charge voltage setting

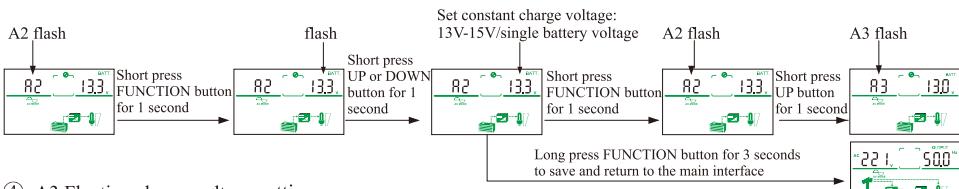


④ A3 Floating charge voltage setting

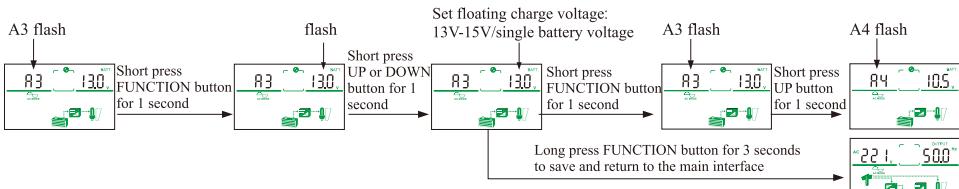


⑤ A4 Low voltage protection point setting(Only available for Pb lead-acid battery)

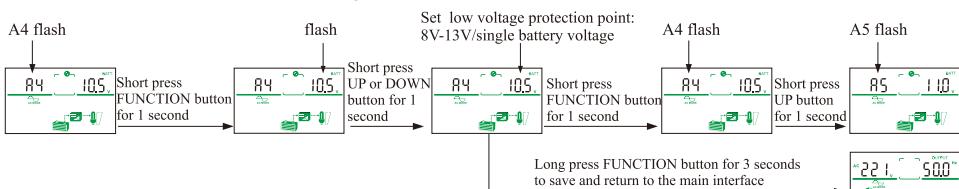


⑤ A5 Auto start output recover voltage setting(Only available for Pb lead-acid battery)

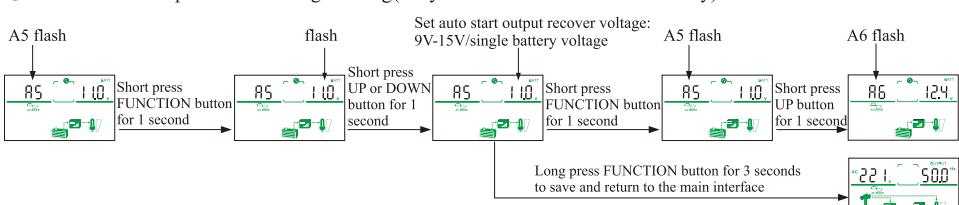


⑦ A6 Mains supply to inverter supply voltage setting(Only available for Pb lead-acid battery & d3 working mode)

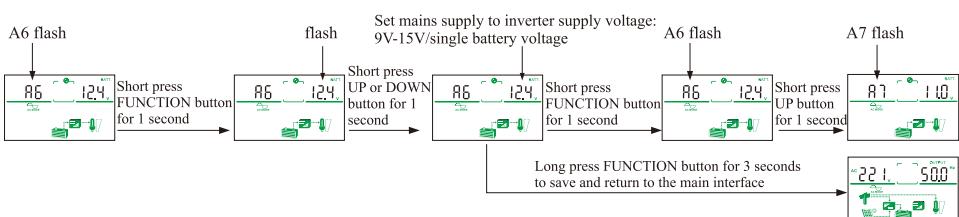


⑧ A7 Inverter supply to Mains supply voltage setting(Only available for Pb lead-acid battery & d3 working mode)

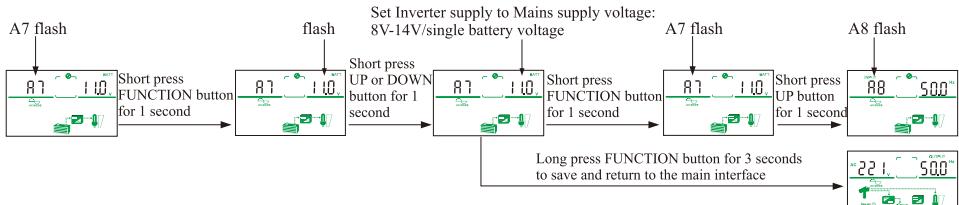


⑨ A8 Frequency setting

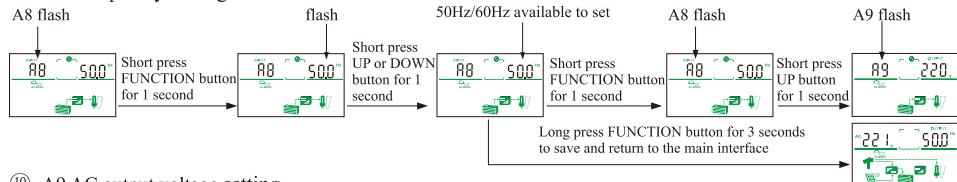


⑩ A9 AC output voltage setting

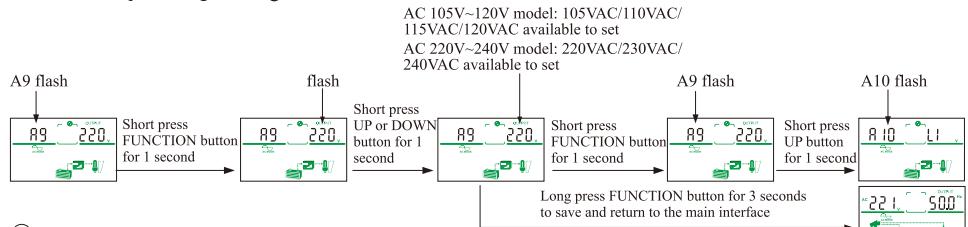


⑪ A10 Battery type setting

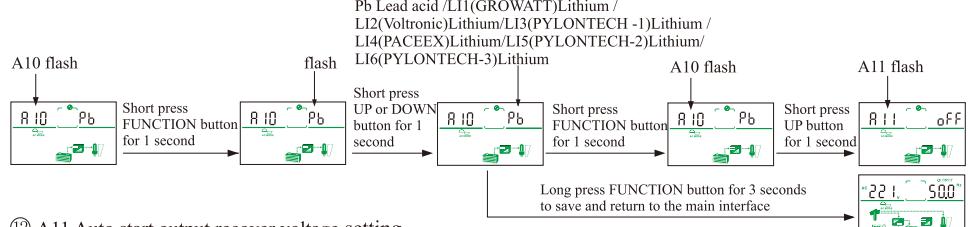


⑫ A11 Auto start output recover voltage setting

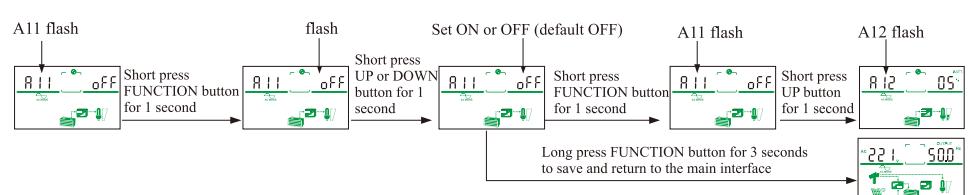


⑬ A12 Low voltage protection battery capacity value setting(Available for LI* lithium batteries)

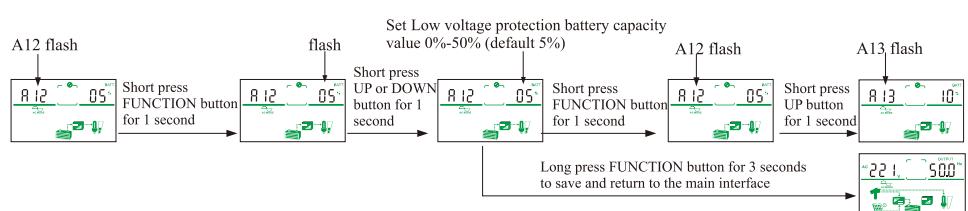


⑭ A13 Low voltage self-restoring battery capacity value setting(Available for LI* lithium batteries)

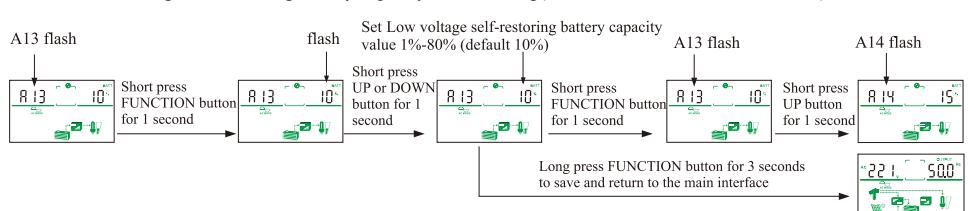


⑮ A14 Inverter supply to Mains supply battery capacity value setting(Available for LI* lithium batteries &d3 working mode)

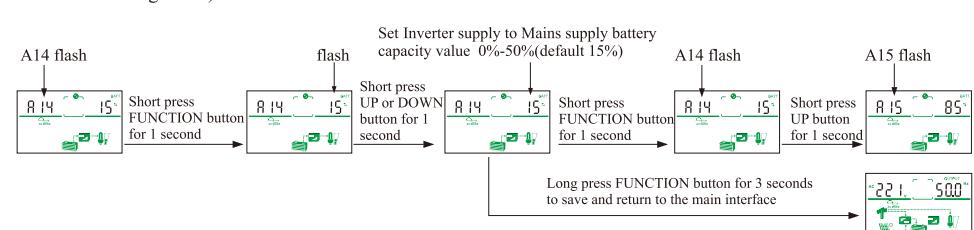


⑯ A15 Mains supply to inverter supply voltage setting(Available for LI* lithium batteries &d3 working mode)

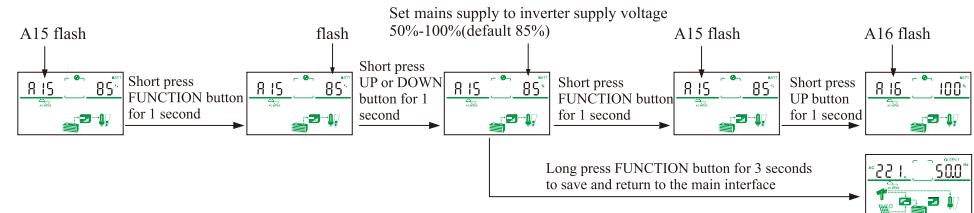


⑰ A16 Charge end battery capacity value setting(Available for LI* lithium batteries)

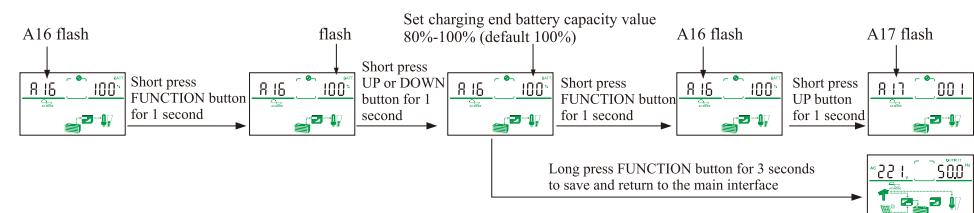

⑱ A17 RS485-1 Communication address setting

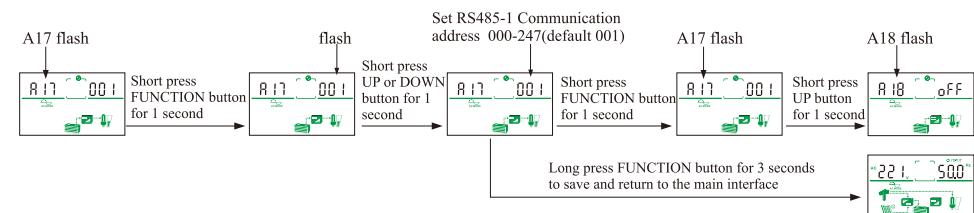

⑲ A18 Generator function setting

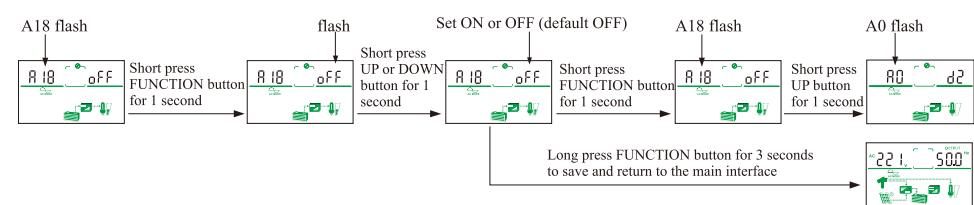

Note: If no operation is performed under the function setting page, data will be saved automatically after 40S and return to the main interface.

5-3: Steps of start up

- 1) Connect loads to the AC output of inverter.
- 2) Connect mains power and batteries, please notice the negative and positive side during wiring(refer to chapter 5 for wiring).
- 3) Press  button to start the inverter(start automatically under the state of mains power).
- 4) After 30s when the output is stable, start loads in turn.

5-4: Steps of power off

- 1) Disconnect loads.
- 2) Press  button to disconnect AC output.
- 3) Disconnect mains power and inverter shut down.

6. Maintenance

- 1) The inverter just needs the minimum maintenance. And life of Pb(battery) can be preserved by frequent charge.
- 2) Batteries should be charged for every three months if the inverter is long-term unused.
- 3) Lifespan of battery normally lasts for three to five years. It should be replaced in advance if any battery is found in poor state. And the replacement shall be operated by the professional.
- 4) Batteries should be wholly replaced by the instruction of the supplier.
- 5) For every three months, batteries should be discharged (until the inverter shuts down) and recharged. Every charge (by standard inverter) should last at least for 12 hours.
- 6) Among high temperature area, batteries should be discharged and recharged for every two months. Every charge (by standard inverter) should last at least for 12 hours.

Note:

- Please shut down the inverter and disconnect AC input before replacing batteries.
- Please do not wear metal jewelry such as ring or watch.
- Please use screwdriver with insulated handle and avoid to place tools or metal objects on batteries.
- Please avoid short circuit or reverse connection.

Warning:

- 1) Battery must not be put in the fire, which may cause explosion.
- 2) Shall not open or damage the battery. Electrolyte released will cause harm to eyes and skin and even intoxication.

7. Error and Solution

7-1: Regular error

Error	Reason	Solution
Unable to boot	Low voltage in battery or overload	Charging the battery or reduce the loads
Shut down with load	Low voltage in battery or overload	Charging the battery or reduce the loads
Alarm for boot	Low voltage in battery or overload	Charging the battery or reduce the loads
Heat of connector	Poor contact	Check and fasten the screws

7-2: Code for alarm

Code for alarm	Reason	Solution
01	Over temperature protection	Check and reduce some loads
02	Reversion of transformer	Please contact the supplier
03	Data-saving error	Please contact the supplier
04	Internal reference voltage error	Please contact the supplier
05	Output short circuit protection	Please check if user's equipment is short circuit.
06	Battery over voltage protection	Please contact the supplier
07	NTC error	Please contact the supplier
08	Communication failure of controller	Please contact the supplier
11	Overload alarm/protection	Please reduce the loads
12	Contra variant error	Please contact the supplier
13	Battery low voltage alarm	AC output is going to stop, please set as AC first with charging mode, and restart the inverter
14	Battery low voltage protection	Please turn into AC first with charging mode, and restart the inverter
15	AC over voltage alarm	Please check the AC input voltage
16	Battery over voltage protection	Please contact the supplier
17	The mains frequency is abnormal	A message is displayed indicating that the input frequency of the mains and generator is abnormal, Please enable the generator function
19	Voltage setting parameters are abnormal	Please check whether the setting parameters meet the setting requirements or not/Rebooting the machine can restore the last saved parameters
21	Communication failure between the inverter and lithium battery	Please check whether the communication cable connects correctly between the inverter and lithium battery
22	Lithium battery over voltage alarm	The inverter will be turned off for charging, and then return to normal.
23	Lithium battery low voltage alarm	Please charge the battery

8. Technical specification

Model: ESS-Li	301H/A	601H/A	122H	222H
Rated Power	300W	600W	1200W	2200W
Size(L*W*Hmm)	560x380x150			630x430x219
Package Size(L*W*Hmm)	610x435x225			680x485x295
N.W.(kg)(Without Battery)	7	10	15	20.5
G.W.(kg)(Without Battery)	8.5	11.5	16.5	22.5
Installation Method	Tower			
Batteries & Charging	Battery Voltage	12.8VDC		25.6VDC
	Battery Type	LiFePO4 Lithium iron phosphate		
	Battery Capacity	50AH		100AH
	External Battery Expansion	No Support		
	Maximum charging current (AC+PV)	25A	30A	30A
	Maximum PV charging current	20A	20A	20A
	Maximum AC charging current	5A	10A	10A
	Customize charge and discharge parameters	The battery charging and discharging parameters can be set on the panel		
	Battery undervoltage alarm (Default value)	11V	11V	22V
	Battery undervoltage protection (Default value)	10.5V	10.5V	21V
	Battery overvoltage alarm (Default value)	15.5V	15.5V	31V
	Battery overvoltage protection (Default value)	17V	17V	34V
	Battery overvoltage recovery value(Default value)	14.5V	14.5V	29V
AC Input	Rated AC Input Voltage	AC105V~120V Model: 105VAC/110VAC/115VAC/120VAC(Can set) AC220V~240V Model: 220VAC/230VAC/240VAC(Can set)		
	AC Input Voltage Range	68V~133VAC(105VAC)/73V~138VAC(110VAC)/78V~143VAC(115VAC)/83V~148VAC(120VAC)/145V~275VAC(220VAC)/155V~285VAC(230VAC)/165V~295VAC(240VAC)		
	Rated AC Input Frequency	50Hz/60Hz(Can set)		
	AC Input Frequency Range	45Hz~55Hz(50Hz) / 55Hz~65Hz(60Hz)		
AC Output	Output Waveform	Pure Sine Wave		
	Conversion Efficiency (Battery Mode)	>85%		
	No-load Loss(Battery Mode)	≤0.8% Rated power		
	Output Voltage(Battery Mode)	AC105V~120V Model: 105VAC±2%/110VAC±2%/115VAC±2%/120VAC±2%(Can set) AC220V~240V Model: 220VAC±2%/230VAC±2%/240VAC±2%(Can set)		
	Output Voltage(AC Mode)	AC105V~120V Model: 105VAC±10%/110VAC±10%/115VAC±10%/120VAC±10%(Can set) AC220V~240V Model: 220VAC±10%/230VAC±10%/240VAC±10%(Can set)		
	Output Frequency(Battery Mode)	50Hz±1%/60Hz±1%(Can set)		
	Output Frequency(AC Mode)	Follow input		

Inside Solar controller	Max PV Input Voltage(Voc) (At the lowest temperature)	120VDC		
	PV Array Maximum Power	280W	560W	1120W
	MPPT tracking range	15V-80CDV	30VDC-100VDC	30VDC-100VDC
Conversion Efficiency		>95%		
Other	Protection	Battery over-voltage protection/overload power protection/short-circuit protection/over-temperature protection		
	Transfer Time	≤4mS		
	Class of protection	IP20		
	Display	LCD		
	Cooling mode	Cooling fan in intelligent control		
	Communication	RS485 communication/APP data collector module interface(WIFI/GPRS monitoring (optional))		
	Working Mode	Battery First/AC First/Saving Energy Mode		
Environment	Operating temperature	-10°C~40°C		
	Storage temperature	-15°C~60°C		
	Noise	≤55dB		
	Elevation	2000m(More than derating)		
	Humidity	0%~95% (No condensation)		

Above parameter revision change without notification.

Technical specification

Model: ESS-Li	302H	502H	502H/150	502H/200	602H	702H				
Rated Power	3000W	5000W	5000W	5000W	6000W	7000W				
Size(L*W*Hmm)										
Package Size(L*W*Hmm)										
N.W.(kg)(Without Battery)	37	40	52. 5	52. 5	54. 5	57. 5				
G.W.(kg)(Without Battery)	45	48	62.5	62.5	64.5	67.5				
Installation Method			Tower							
Batteries & Charging	Battery Voltage	51.2VDC								
	Battery Type	LiFePO4 Lithium iron phosphate								
	Battery Capacity	100AH	150AH	200AH						
	External Battery Expansion	Support								
	Maximum charging current (AC+PV)	55A	90A	90A	90A	110A				
	Maximum PV charging current	40A	60A	60A	60A	80A				
	Maximum AC charging current	15A	30A	30A	30A	30A				
	Customize charge and discharge parameters	The battery charging and discharging parameters can be set on the panel								
	Battery undervoltage alarm (Default value)	10% of the battery capacity								
	Battery undervoltage protection (Default value)	5% of the battery capacity								
	Battery overvoltage alarm (Default value)	According to BMS instructions								
AC Input	Rated AC Input Voltage	AC105V~120V Model: 105VAC/110VAC/115VAC/120VAC(Can set) AC220V~240V Model: 220VAC/230VAC/240VAC(Can set)								
	AC Input Voltage Range	80V~133VAC(105VAC)/85V~138VAC(110VAC)/90V~143VAC(115VAC)/95V~148VAC(120VAC)/170V~275VAC(220VAC)/180V~285VAC(230VAC)/190V~295VAC(240VAC)								
	Rated AC Input Frequency	50Hz/60Hz(Can set)								
	AC Input Frequency Range	45Hz~55Hz(50Hz) / 55Hz~65Hz(60Hz)								
AC Output	Output Waveform	Pure Sine Wave								
	Conversion Efficiency (Battery Mode)	>85%								
	No-load Loss(Battery Mode)	≤0.8% Rated power								
	Output Voltage(Battery Mode)	AC105V~120V Model: 105VAC±2%/110VAC±2%/115VAC±2%/120VAC±2%(Can set) AC220V~240V Model: 220VAC±2%/230VAC±2%/240VAC±2%(Can set)								
	Output Voltage(AC Mode)	AC105V~120V Model: 105VAC±10%/110VAC±10%/115VAC±10%/120VAC±10%(Can set) AC220V~240V Model: 220VAC±10%/230VAC±10%/240VAC±10%(Can set)								
	Output Frequency(Battery Mode)	50Hz±1%/60Hz±1%(Can set)								
	Output Frequency(AC Mode)	Follow input								

Inside Solar controller	Max PV Input Voltage(Voc) (At the lowest temperature)	180VDC					
	PV Array Maximum Power	2240W	3360W	3360W	3360W	4480W	4480W
	MPPT tracking range	60VDC-140VDC					
Conversion Efficiency		>95%					
Other	Protection	Battery over-voltage protection/overload power protection/short-circuit protection/over-temperature protection					
	Transfer Time	≤4mS					
	Class of protection	IP20					
	Display	LCD					
	Cooling mode	Cooling fan in intelligent control					
	Communication	RS485 communication/APP data collector module interface(WIFI/GPRS monitoring (optional))					
Environment	Working Mode	Battery First/AC First/Saving Energy Mode					
	Operating temperature	-10°C~40°C					
	Storage temperature	-15°C~60°C					
	Noise	≤55dB					
	Elevation	2000m(More than derating)					
	Humidity	0%~95% (No condensation)					

Above parameter revision change without notification.

9. Appendix--485 Communication Port

RS485 communication port pin definition

PIN1-----RS485-B

PIN2-----RS485-A

PIN3-----NC


PIN4-----NC

PIN5-----NC

PIN6-----NC

PIN7-----NC

PIN8-----NC

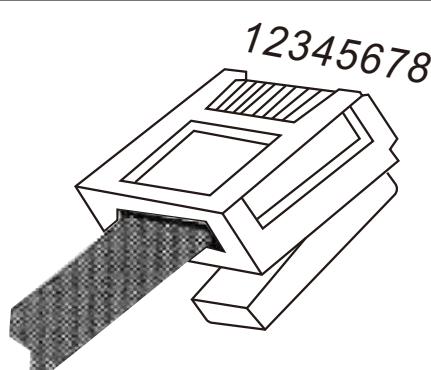

NC: refer to as not connect.

Warranty Card

Customer Name: _____ Tel.: _____

Address: _____

Brand: _____ Model: _____

Serial No.: _____ Date of Purchase: _____

Bought From: _____

Invoice Number: _____ Invoice Price: _____

Warranty Instruction

- Please keep this warranty card as proof of maintenance.
- The warranty period is 1 year from the date of purchase.
- During the warranty period, under the condition of normal use and maintenance, if damage caused by the product's own quality, the company will provide free repair and replacement parts after verification.
- The company reserves the right to maintain and interpret all contents.

Free maintain won't be given under the following circumstance:

- The damage caused by the manipulation that hasn't follow the requests of the manual.
- The product has been repaired, modified by technicians other than our company's, and any internal parts of the product have been replaced by users.
- The product number has been altered or product is inconsistent with the warranty card.
- Damage caused by careless use, penetration of water or other substances into the product.
- Damage caused by accident or natural disaster.

Certificate

Name: _____

Model: _____

Inspectors: _____

Date: _____

Products have been tested qualified by standard and permitted to deliver.